



# Tiki

## Stools

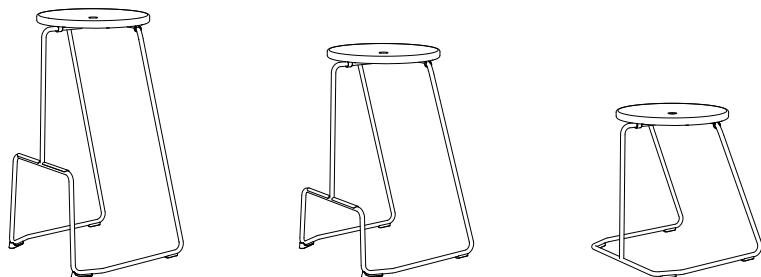






## Stool Trolley

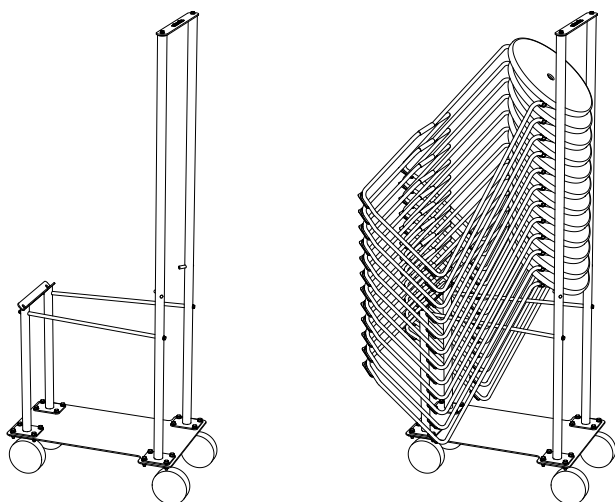

**extremis®**

**IMPORTANT! RETAIN FOR FUTURE  
REFERENCE: PLEASE READ ALL SAFETY  
NOTES AND INSTRUCTIONS. FAILURE  
TO COMPLY WITH THESE MAY RESULT  
IN SEVERE INJURIES.**

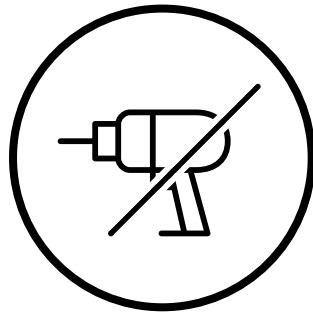

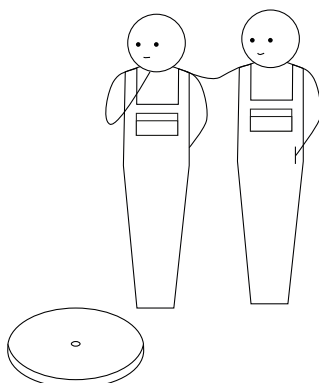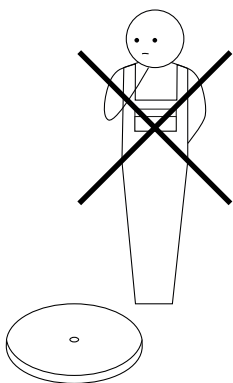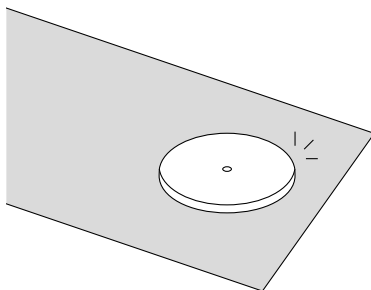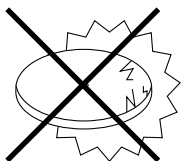

# Table of contents <sup>1/2</sup>

**Mounting kit <sup>↗</sup>**

---

**Exploded view <sup>↗</sup>**

---

**Assembly Tiki  
with powder coated seat <sup>↗</sup>**

---

**Assembly Tiki  
with oak seat <sup>↗</sup>**

## **This is an interactive PDF**

You can easily navigate through this manual, allowing you to smoothly jump from one page to the other.

# Table of contents <sup>2/2</sup>

**Assembly backrest  
with powder coated seat <sup>↗</sup>**

---

**Assembly backrest  
wit oak seat <sup>↗</sup>**

---

**Assembly Tiki Stool Trolley <sup>↗</sup>**

---

**Warnings - Text instructions -  
Maintenance <sup>↗</sup>**


## **This is an interactive PDF**

You can easily navigate through this manual, allowing you to smoothly jump from one page to the other.

# Mounting kit



4 x M6




4 x M6x12

Mounting kit **TIK201** to fix the  
powder coated seat to the frame




4 x M6




4 x M6x16

Mounting kit **TIK181** to fix the  
oak seat to the frame



4 x M6x16


powder coated seat




4 x M6x20

oak seat



Mounting kit **TIK209**  
to fix the backrest

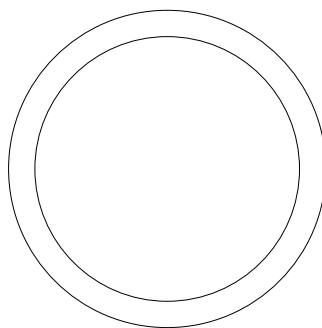

2 x O-ring



16 x M8

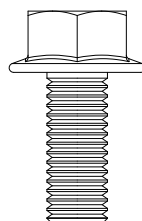

16 x M8x20




6 x M6x40

Mounting kit **TIK541** to fix the  
Tiki Stool Trolley




# Exploded view


Bar stool

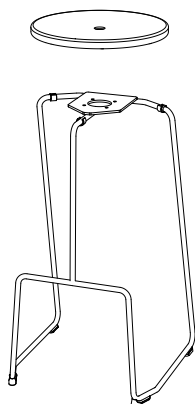


Counter stool

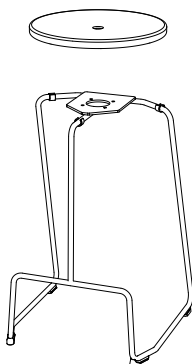

Stool

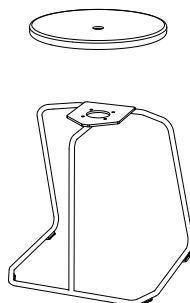

Tiki Stool Trolley

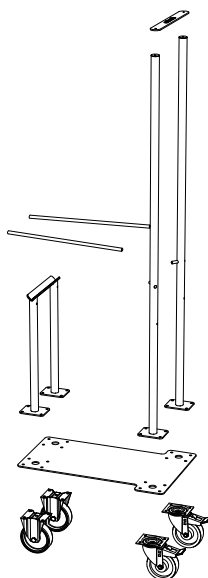




# Tiki with powder coated seat

1.


N° 5



5'

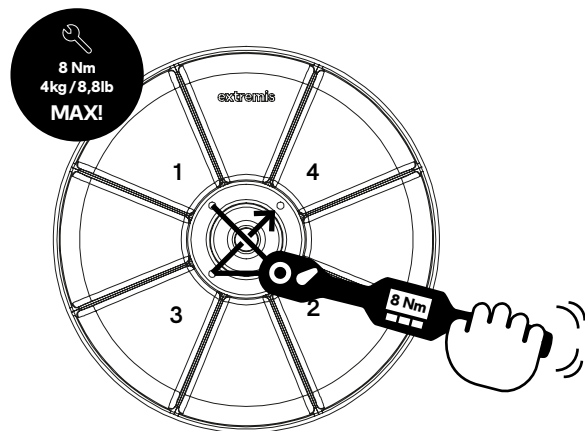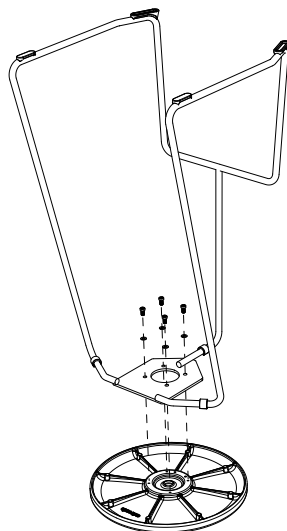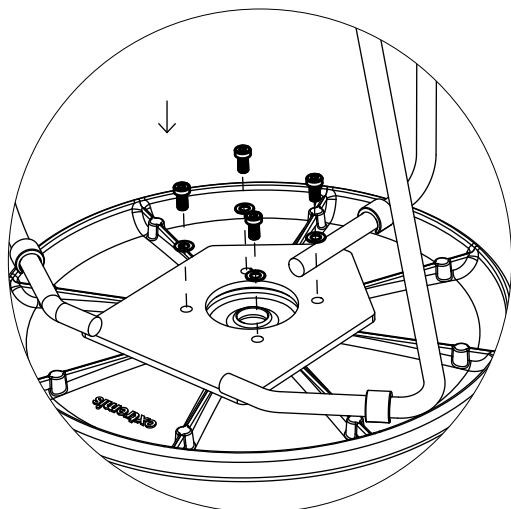

**TIK201**

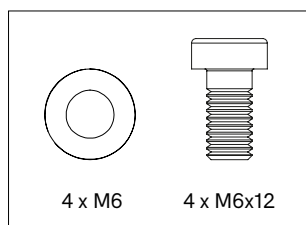





# Tiki with oak seat

1.


N° 5




5'

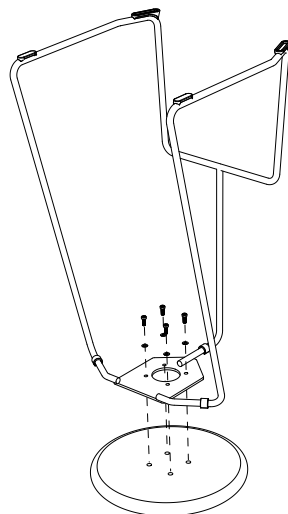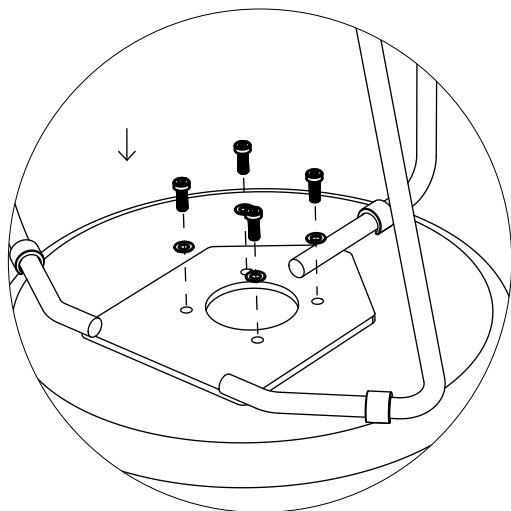

8 Nm  
4kg / 8,8lb  
**MAX!**

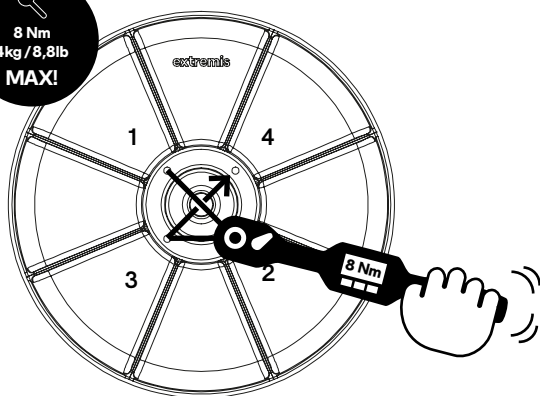

**TIK201**

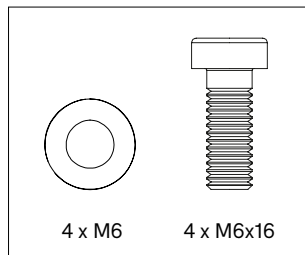


# Backrest with powder coated seat

1.

N° 5






5'

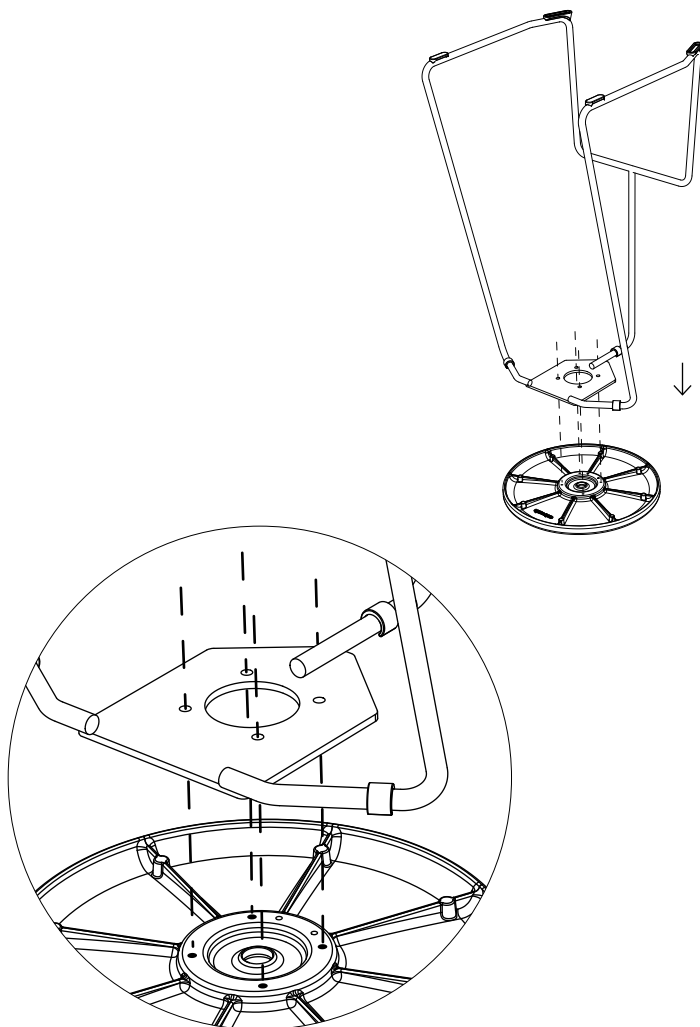

**Lay the seat upside down on a table and position  
the frame on top of it**


2.

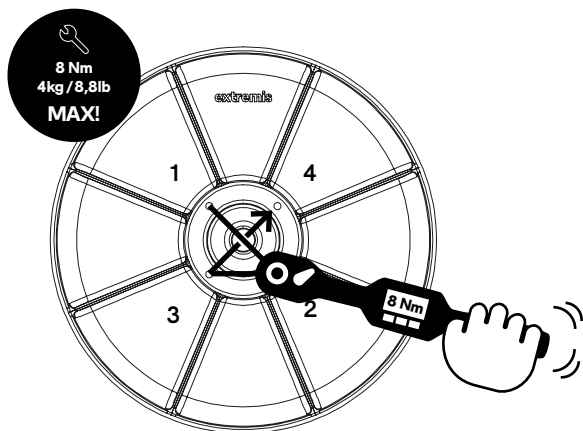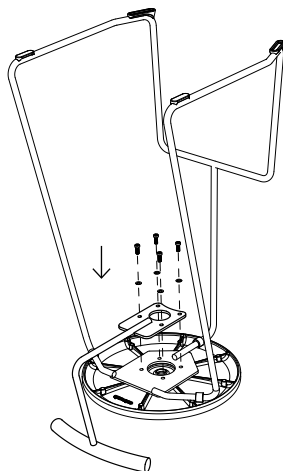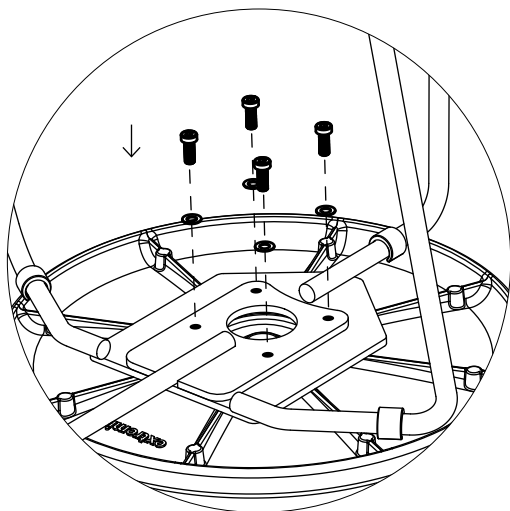

**Position the backrest to the frame and  
attach it the washers and bolts**

**TIK201**

**TIK209**

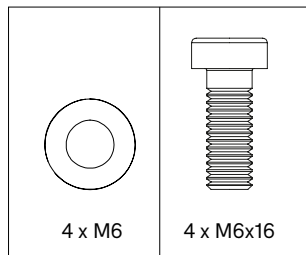



## Backrest with oak seat

1.

N° 5






5'

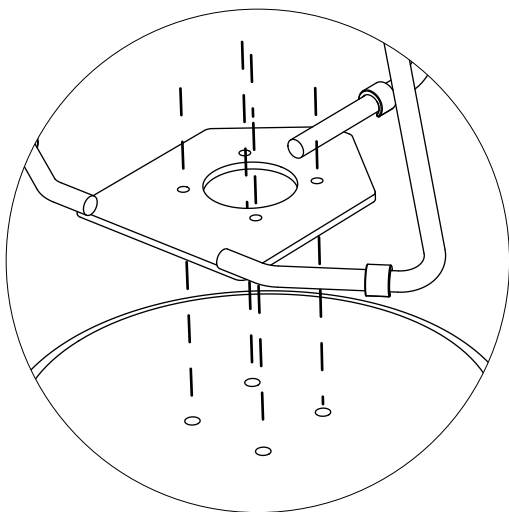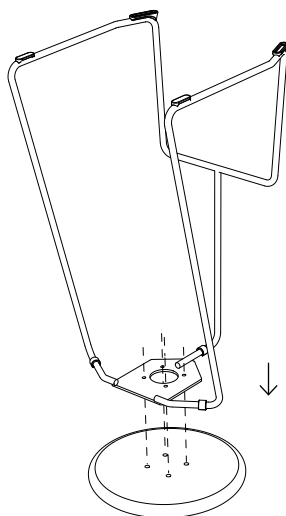

**Lay the seat upside down on a table and position  
the frame on top of it**


2.

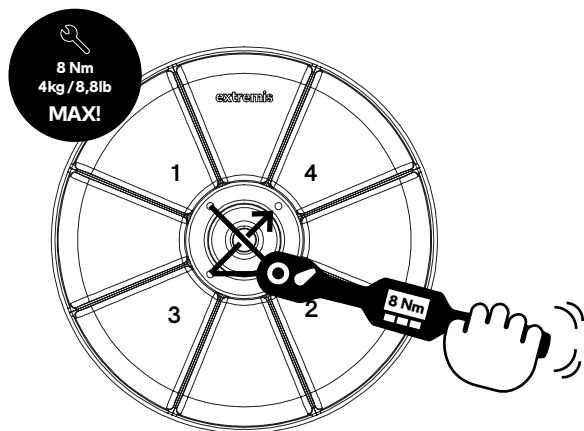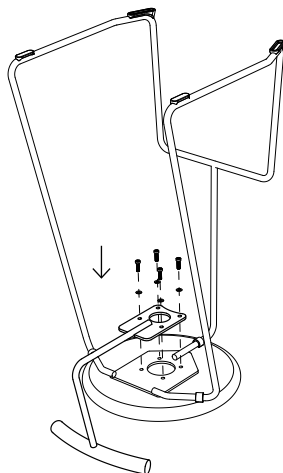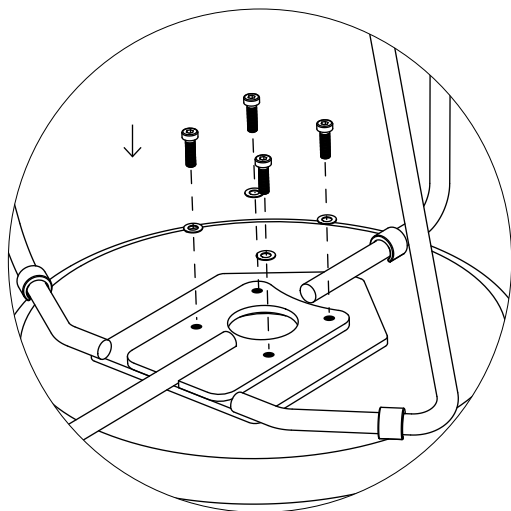

**Position the backrest to the frame and  
attach it the washers and bolts**

**TIK201**

**TIK209**

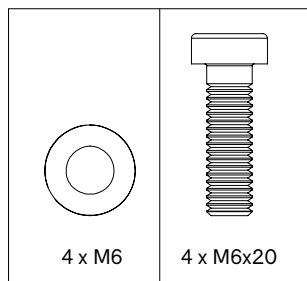

4 x M6

4 x M6x20



# Tiki Stool Trolley

1.


N° 5




5'

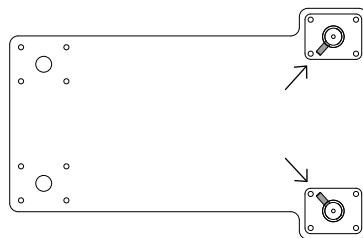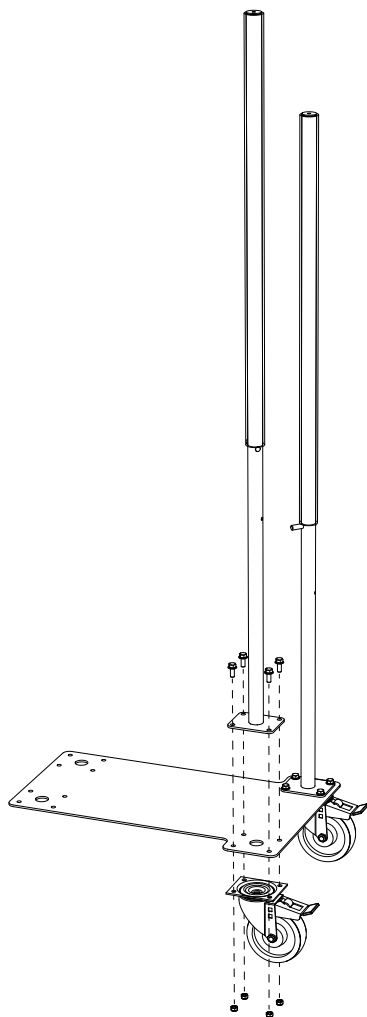

**Make sure the small pins on the large tubes are facing inwards**



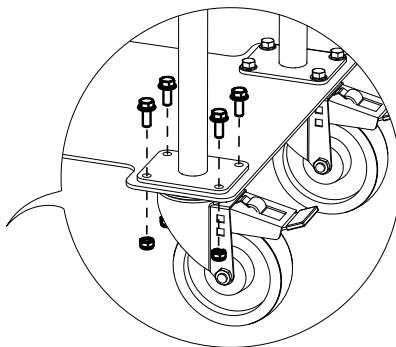


**TIK541**

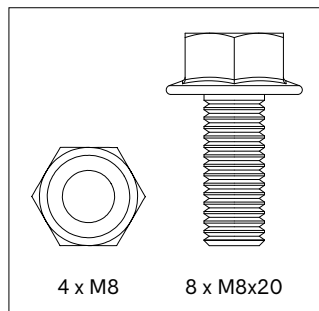


2.




**Make sure the recess of the front support is facing forward**

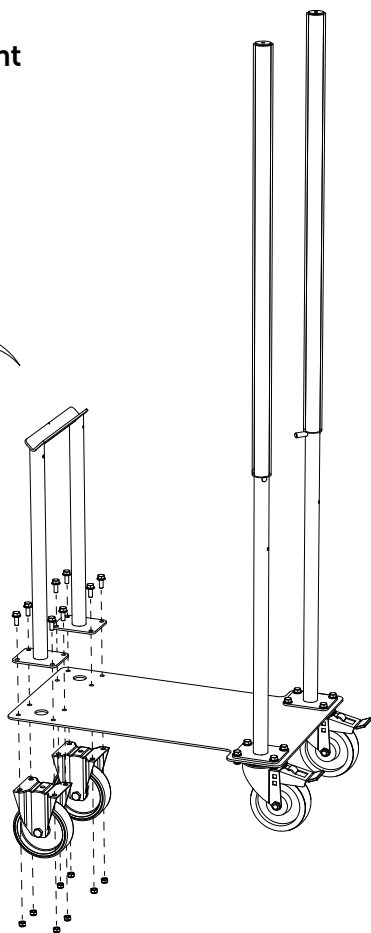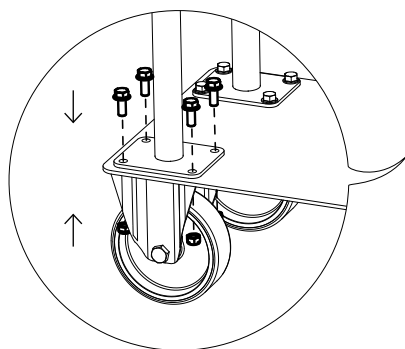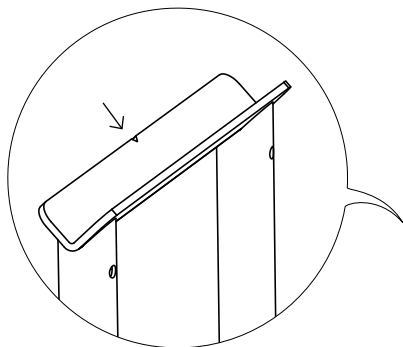


**TIK541**

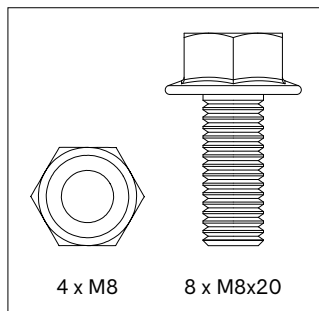

3.

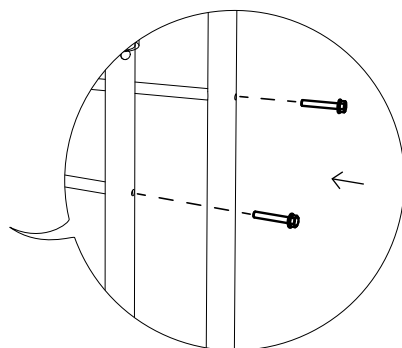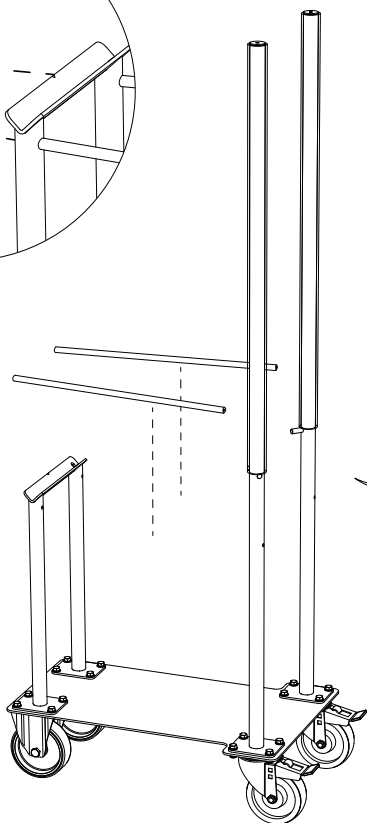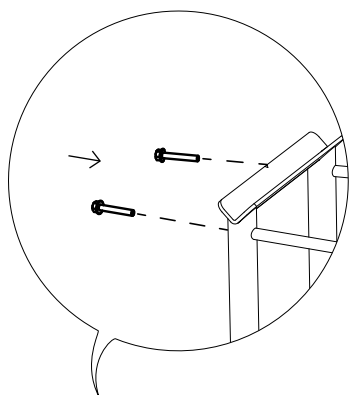



**TIK541**

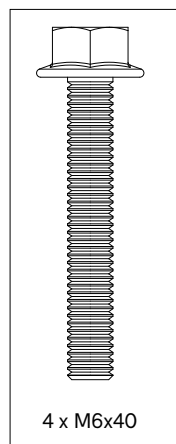


4 x M6x40




4.

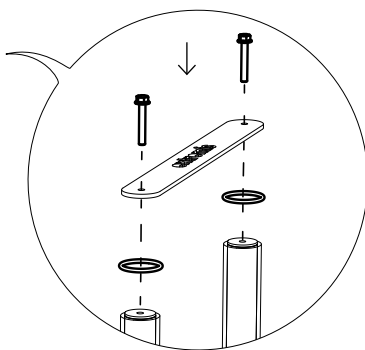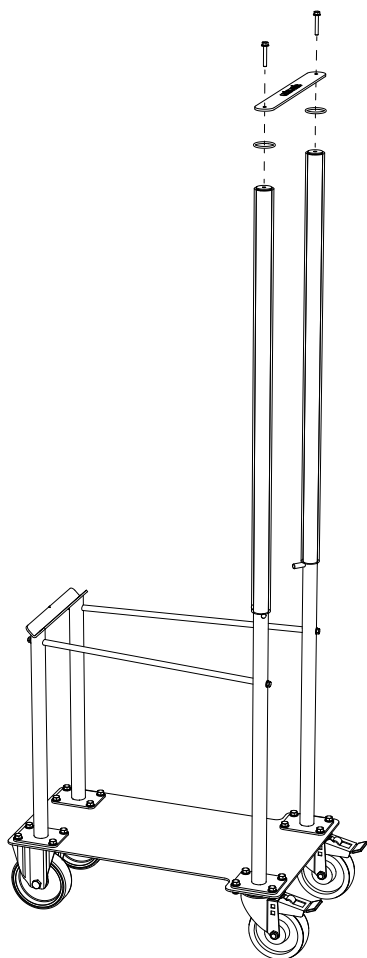


**TIK541**

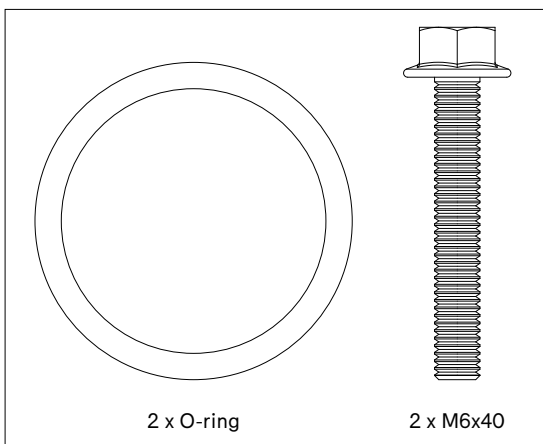

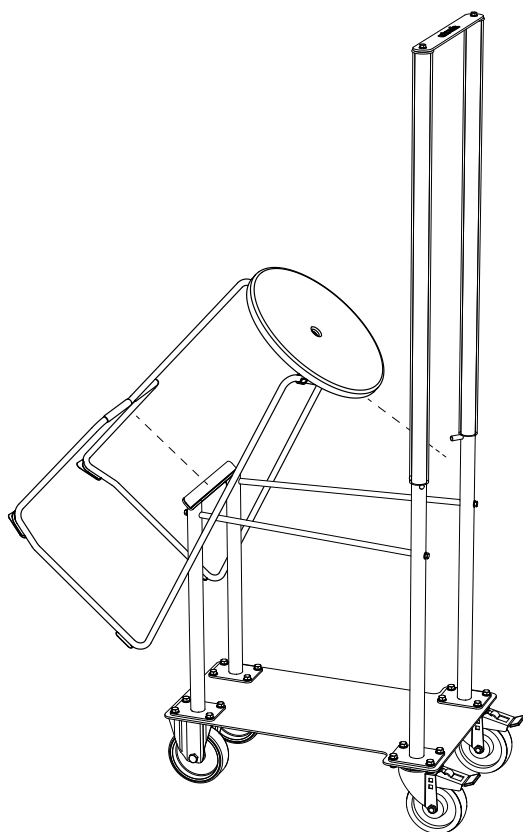

**The trolley safely transports up to 12 stools, counter stools or bar stools (with or without backrest)**

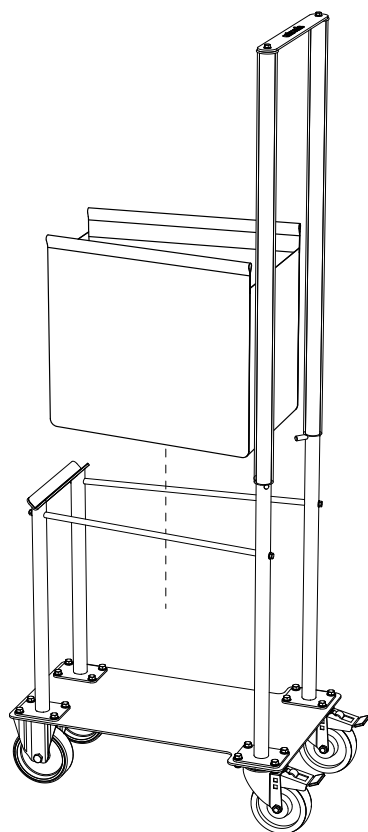

**Attach the storage bag around the connection axis with  
the push buttons**

# **Warnings**

## **Text instructions**

### **Maintenance**

**Warnings** ↗

---

**Assembly text instructions** ↗

---

**Maintenance** ↗



# Warnings

## General

- Do not use any sharp tools to open the packaging.
- We strongly advise against using power tools.
- Tripping hazard, mind your step.
- Do not put out cigarettes on the bench.
- Not graffiti proof.
- Do not leave children unattended whilst playing on the bench.
- To avoid danger of suffocation, keep plastic bags away from babies and children.
- Colors can differ over years and from batch to batch.

## Product

- Do not disassemble the seats unless they need to be replaced.
- Do not lean forwards, always stay on 4 feet.
- Stackable up to 4 - 6 pieces.
- Max. 1 person or 120 kg per seat.

## Powder coating

- White powder coating requires more maintenance.
- Do not use abrasive scouring powders or scourers as they will scratch the surface.
- Color can fade to some extent when exposed to UV.
- Flame retarding - NEN-EN13501-1 A2-s1 - Satisfying the same criteria as Class B for the SBI-test according to EN13823. In addition, under conditions of a fully developed fire these products will not significantly contribute to the fire load and fire growth.
- Dark colors can get very hot in sunny weather.

## Sunbrella

- Not waterproof, store inside!



- Shake or brush off loose dirt immediately.
- UV color fastness: 7/8 (ISO 105-B02).

## **Wood**

- When delivered, the wood is oiled.
- Wood is a natural material and its look is different for every slat, plank and tree.
- Cleaning regularly with mild detergent. Never use a high pressure cleaner as this will roughen the wood's smooth surface and irreparably damage the wood's fibers.

## **Galvanized steel**

- Galvanization will become less shiny when used outdoors.
- Flame retarding - NEN-EN13501-1 A1 - Class A1 products will not contribute to fire in any stage, including fully developed fire. For this reason, they are assumed to be capable of satisfying all requirements of all lower classes as well.
- Possible impurities in the immersion tank can cause black marks during galvanization, which are intrinsic to this industrial finishing technique.
- White marks on this zinc layer are also intrinsic to this procedure and will disappear when the furniture is put outdoors.
- This industrial finishing technique may result in a rougher surface. This is intrinsic to the process.



# Assembly text instructions



Take a look at the drawings, starting from page 8

## **Tiki with powder coated seat** (p8)

1. Lay the seat upside down on a table, using the packaging as protection. Attach the frame to the seat with four M6 wave washers and four M6x12 bolts as shown in the drawing.  
Please note: tighten the bolts diagonally as shown on the diagram, do not over-tighten! Max. torque: 8 Nm of 4 kg /8,8 lb.

## **Tiki with oak seat** (p9)

1. Lay the seat upside down on the floor or a table, using the packaging as protection. Attach the frame to the seat with four M6 wave washers and four M6x16 bolts as shown in the drawing.  
Please note: tighten the bolts diagonally as shown on the diagram, do not over-tighten! Max. torque: 8 Nm of 4 kg /8,8 lb.

## **Backrest with powder coated seat** (p10)

1. Lay the seat upside down on a table, using the packaging as protection. Place the frame on the seat as shown in the drawing.
2. Position the backrest on the frame and secure it with four M6 wave washers and four M6x16 bolts as shown in the drawing.  
Please note: tighten the bolts diagonally as shown on the diagram, do not over-tighten! Max. torque: 8 Nm of 4 kg /8,8 lb.



## Backrest with oak seat (p12)


1. Lay the seat upside down on a table, using the packaging as protection. Place the frame on the seat as shown in the drawing.
2. Position the backrest on the frame and secure it with four M6 wave washers and four M6x20 bolts as shown in the drawing.  
Please note: tighten the bolts diagonally as shown on the diagram, do not over-tighten! Max. torque: 8 Nm of 4 kg /8,8 lb.

## Tiki Stool Trolley (p14)

1. Attach the large back tubes, together with the caster wheels, to the back side of the base plate with four M8x16 bolts and four M8 lock nuts each. Attention: Make sure the small pins on the large tubes are facing inwards!
2. Now attach the front support and block wheels to the front of the base plate with four M8x16 bolts and four M8 lock nuts each. Attention: Make sure the recess on top of the front support is facing forward.
3. Then attach the connexion axes to the tubes with four M6x40 bolts.
4. Finally fix the top connection plate to the top of the large tubes with two M6x40 bolts and two o-rings





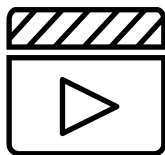

Watch the maintenance videos on our website:  
[www.extremis.com/maintenance](http://www.extremis.com/maintenance)

## **Powder coating**

### **CLEANING**

#### Regularly

Use Extremis Multicleaner, a 100% biodegradable detergent or common kitchen cleaning products. Avoid using aggressive products. These surfaces are best cleaned with a neutral cleaning product diluted in water.

### **REPAIRING DAMAGED POWDER COATING**

#### When damaged

The impact of sharp objects can damage the coating. Scratches or dents can be touched up with our paint pens. However this only camouflages the scratches without removing them.

## **Sunbrella**

### **SPILLED LIQUIDS**

#### Immediately after use

It is best to treat spilt liquids immediately by placing a sheet of absorbent kitchen paper on them. The water-resistant coating on the Sunbrella prevents droplets from penetrating the fabric.



## REGULAR CLEANING

### When dirty

Make a solution to remove stains on your Sunbrella.

## MACHINE WASHING

### Rarely

It is also possible to put the blankets and cushion covers in a washing machine (30°). Do not dry clean or tumble dry. The fabric can be creased. Ironing will help to recover the waterrepellent coating of the fabric, but only at a cool setting (delicates). As some irons exceed the recommended temperature at the synthetic setting, test a small, inconspicuous area before ironing the entire fabric. DO NOT use a steamer or iron set to the steam setting.

## REMOVING STUBBORN STAINS

### Only if nothing else helps

More drastic measures needed? Bleach can be used if nothing else helps. Protect the area around your Sunbrella fabric when using a bleach solution – bleach may discolour non-Sunbrella fabrics. Please be aware of the environment when cleaning with bleach. Bleach can have harmful effects on the natural environment around you. We do not advise using bleach if you are surrounded by a body of water or another environment that could be affected. If stains and/or mildew marks are severe, the quantity of bleach may be increased.

## Wood

## DAY TO DAY CLEANING

### Clean regularly and after every use

Wood doesn't need much maintenance, but the better you treat it, the longer it will last. Cleaning the wood regularly and immediately after use with a damp cloth will prevent fluids from penetrating deep into the wood.



## **Galvanized steel**

### **CLEANING**

#### When dirty

Clean with lukewarm water and a brush.

### **REPARING DAMAGED PARTS WITH ZINC SPRAY**

#### When damaged

Hot dip galvanization is the most durable way of protecting metal against rusting. If the zinc coating is damaged, the exposed metal can rust. This can easily be touched up with zinc paint that automatically has the same colour and is readily available in shops. Zinc spray forms a quick drying, self healing and flexible coating that helps stop corrosion.





Our headquarters:  
Couthoflaan 20b  
B-8972, Poperinge  
info@extremis.com  
+ 32 57 346020

**extremis.com**

Connect with us



All rights reserved. Unless otherwise specified, all designs and photographs contained in this publication are copyright protected and are the property of Extremis. No part of this publication may be copied or distributed without Extremis' prior written consent. The names of the authors of photographs to which we do not hold rights are mentioned here. We have done our utmost to provide a comprehensive list of names. In the event of an alleged breach, please contact the editorial staff. © Extremis

LAB105-1