


Virus

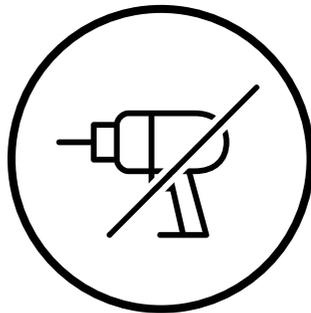

extremis®

**IMPORTANT! RETAIN FOR FUTURE
REFERENCE: READ CAREFULLY.**



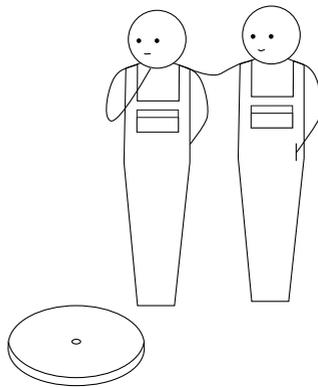
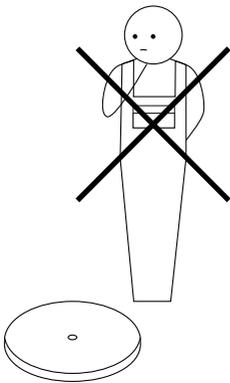
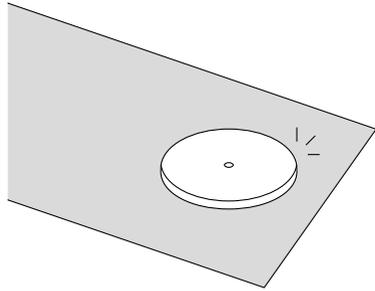
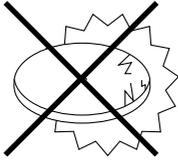


Table of contents ^{1/2}

Mounting kit [↗]

Exploded view [↗]

Assembly Virus 3-seater [↗]

Assembly Virus 4-seater [↗]

This is an interactive PDF

You can easily navigate through this manual, allowing you to smoothly jump from one page to the other.

Table of contents ^{2/2}

Assembly Virus 5-seater [↗]



Assembly backrest [↗]




Assembly floor fastening [↗]

Assembly stacking spacer [↗]

**Warnings - Text instructions -
Maintenance** [↗]


Mounting kit

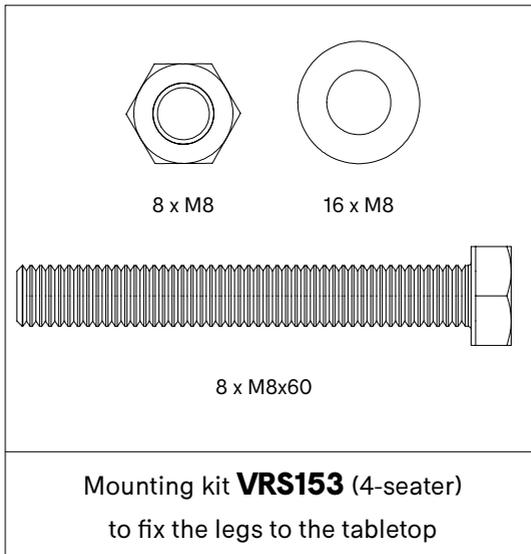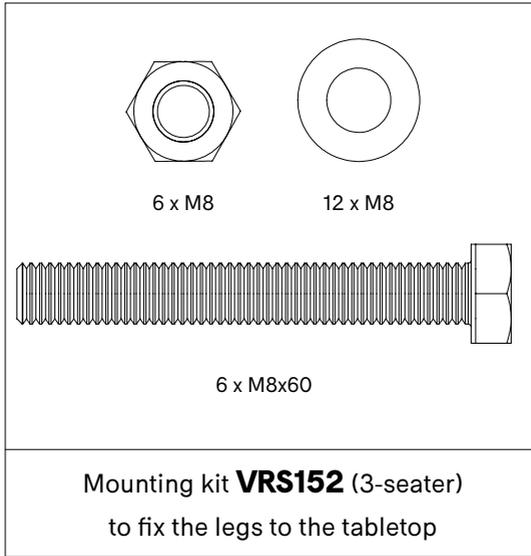

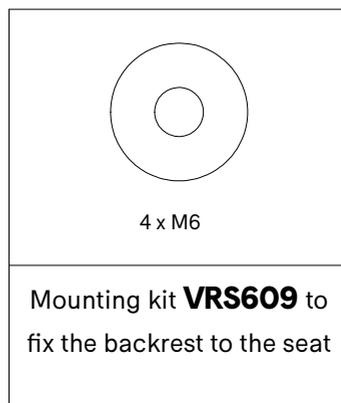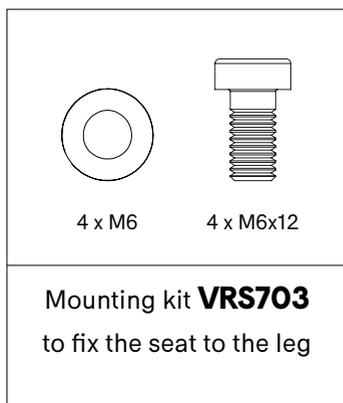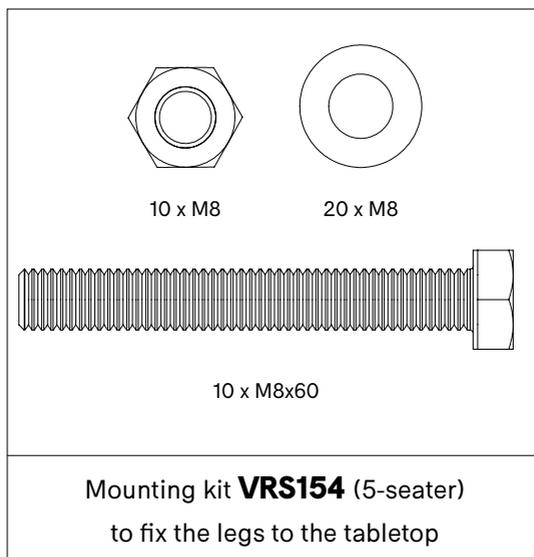


Exploded view


Virus 3-seater

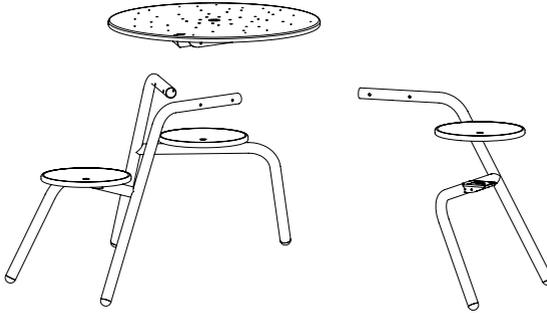

Virus 4-seater

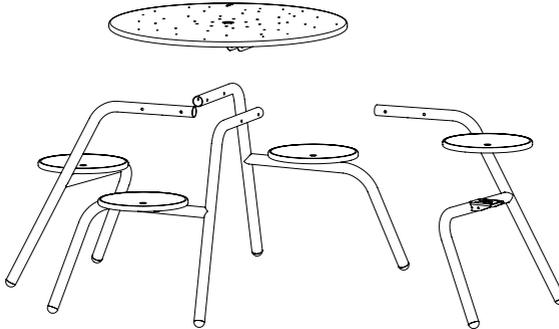

Virus 5-seater

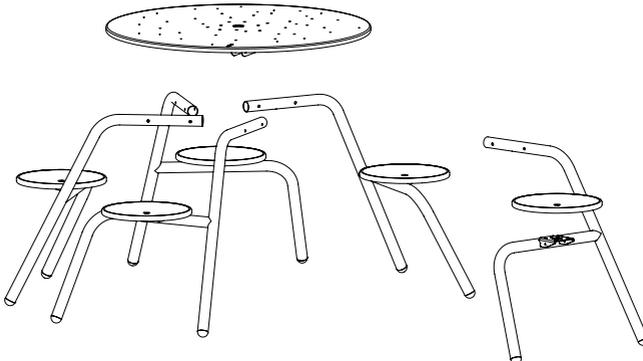

Virus 3-seater

1.


N° 13 (2x)




N° 3





20'




2.

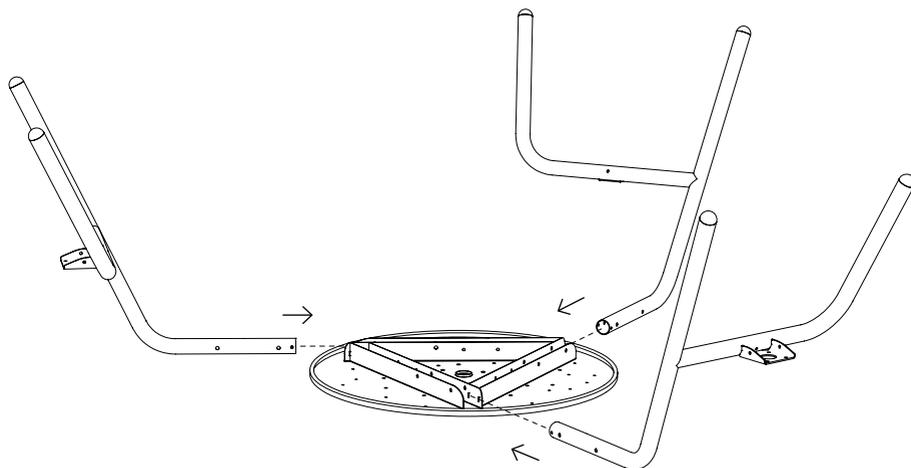

3. Go to page 23 if you want to assembly the stacking spacer ↗

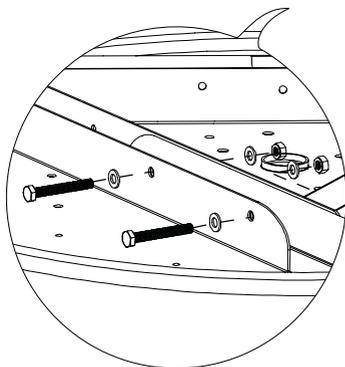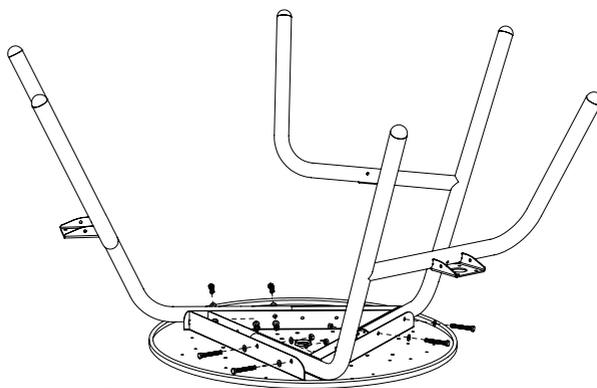


VRS152

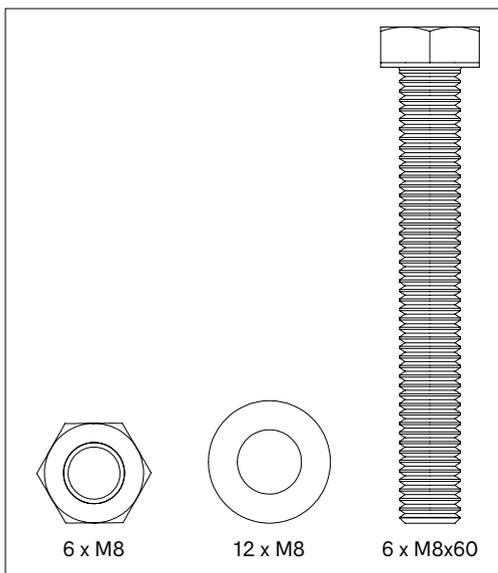


On the outside of the legs

4. Go to page 18 if you want to assemble a backrest ↗

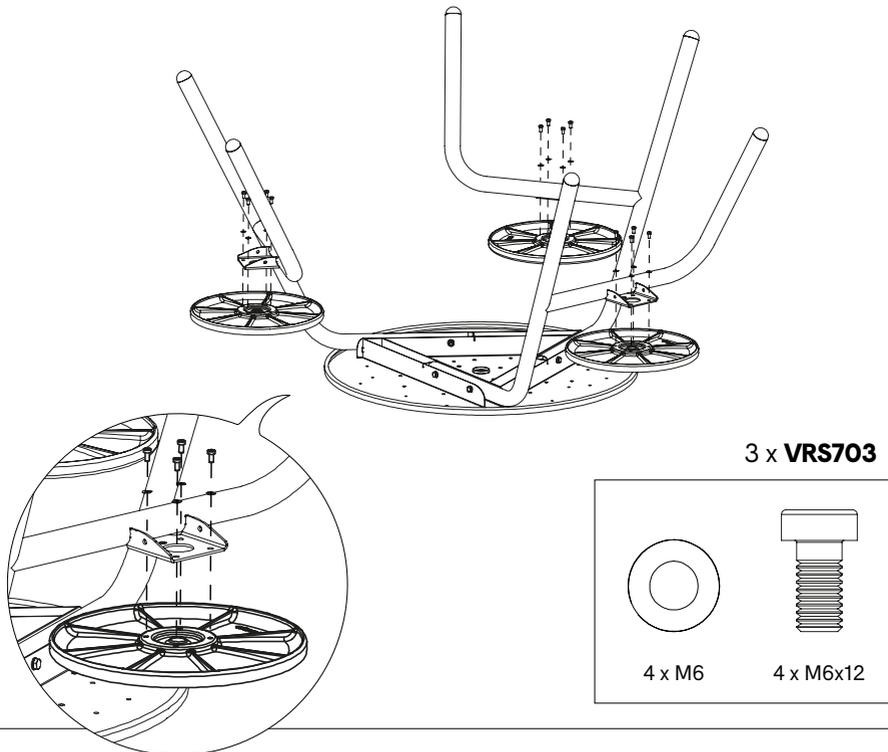

5.

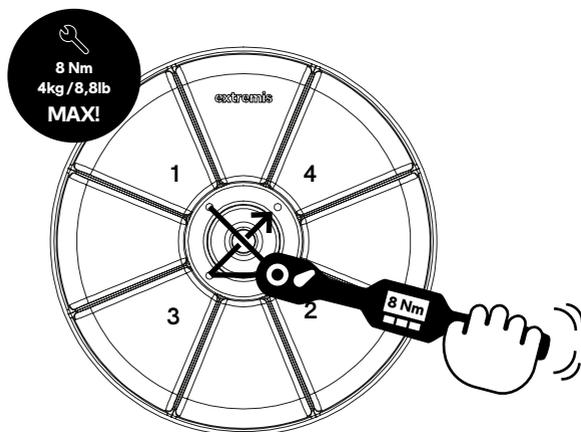

Virus 4-seater

1.


N° 13 (2x)




N° 3





20'




2.

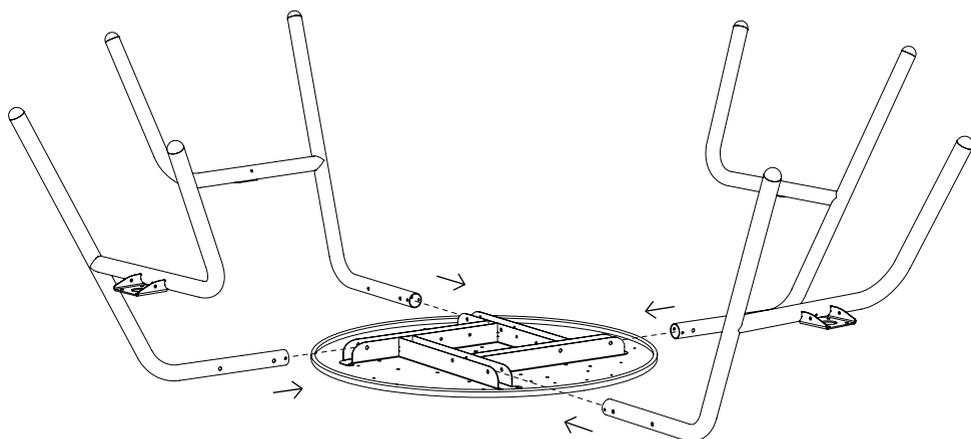

3. Go to page 23 if you want to assembly the stacking spacer ↗

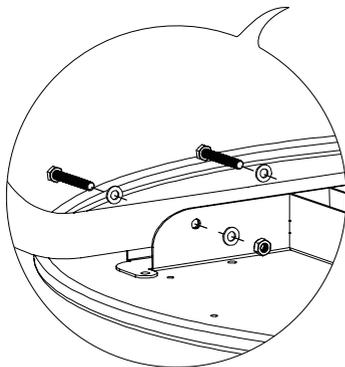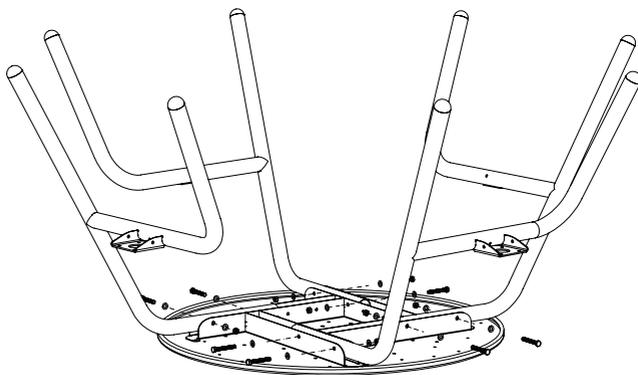


VRS153

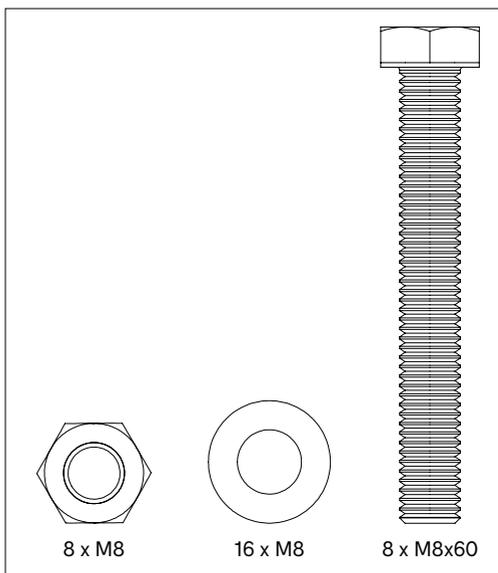


On the outside of the legs

4. Go to page 18 if you want to assemble a backrest ↗

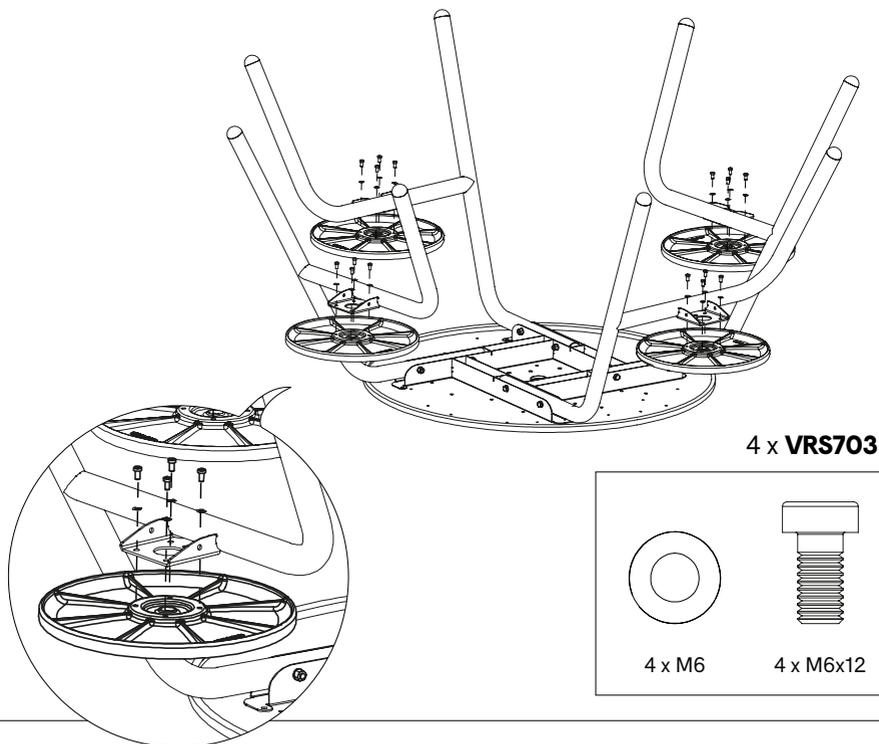

5.

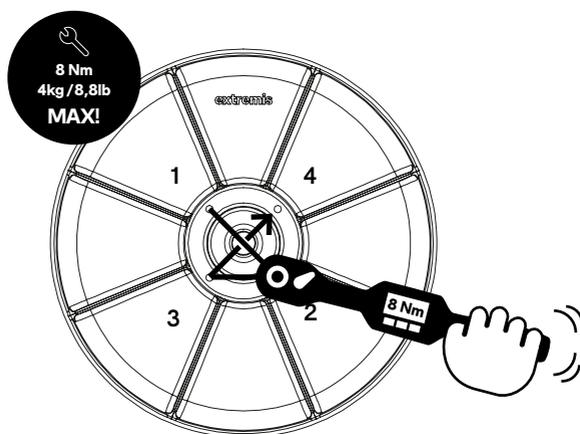

Virus 5-seater

1.


N° 13 (2x)




N° 3




20'




2.

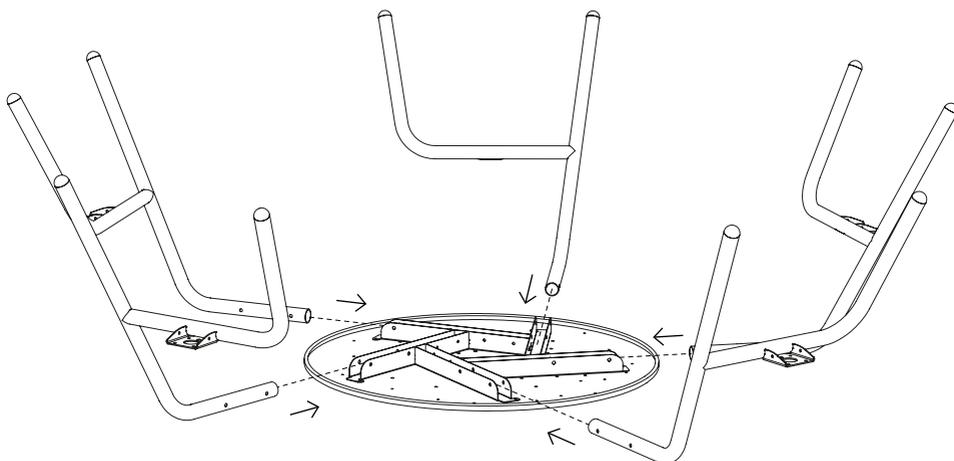

3. Go to page 23 if you want to assembly the stacking spacer ↗

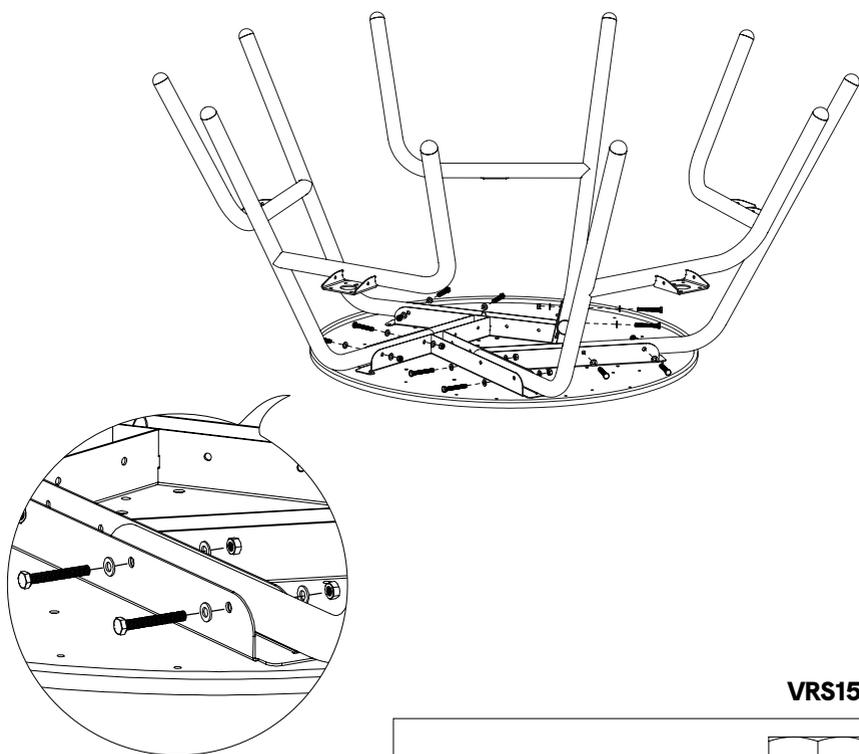


VRS154

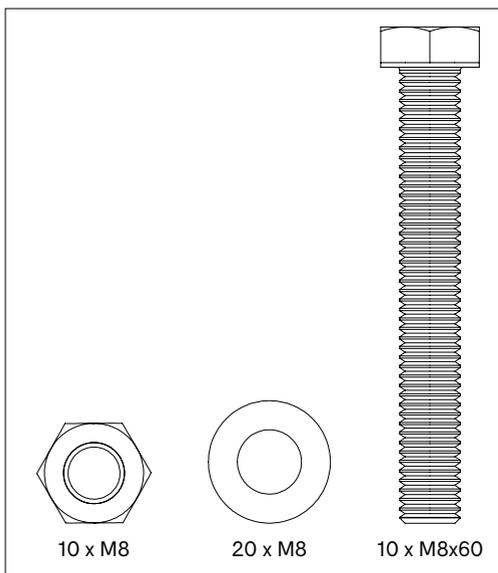


On the outside of the legs

4. Go to page 18 if you want to assemble a backrest ↗

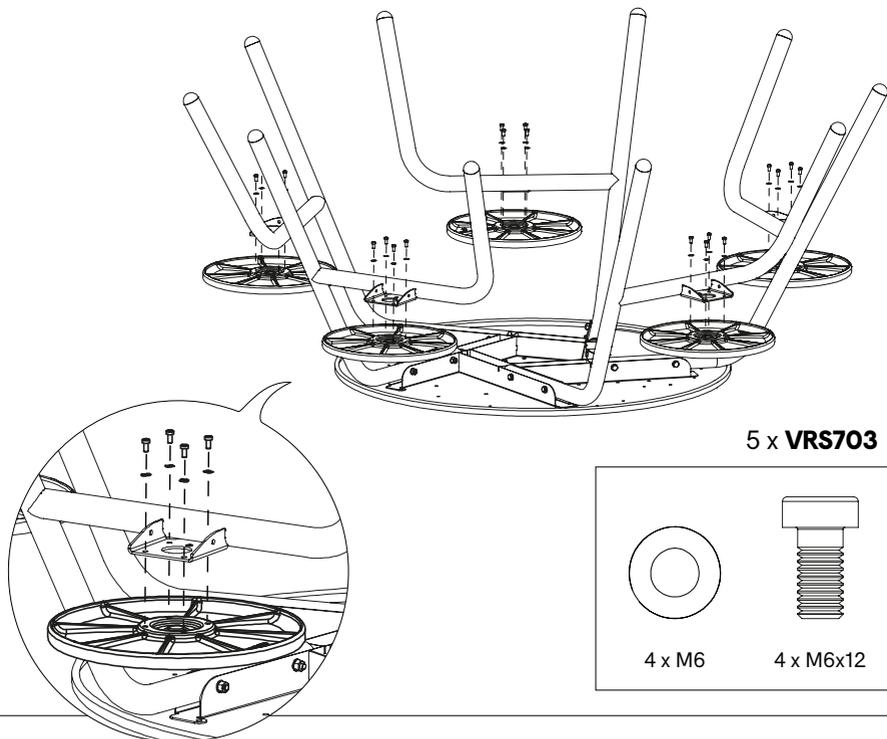

5.

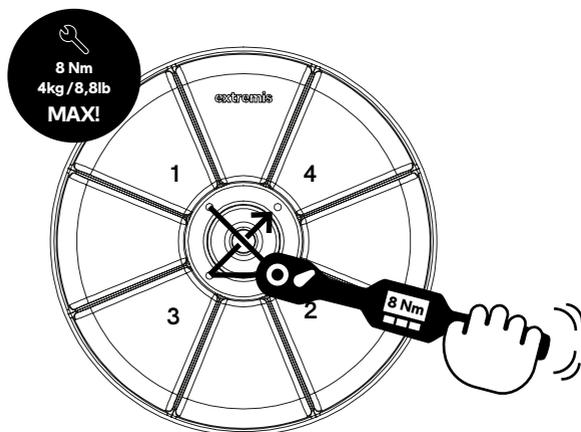



Backrest

1.


N° 3



5'

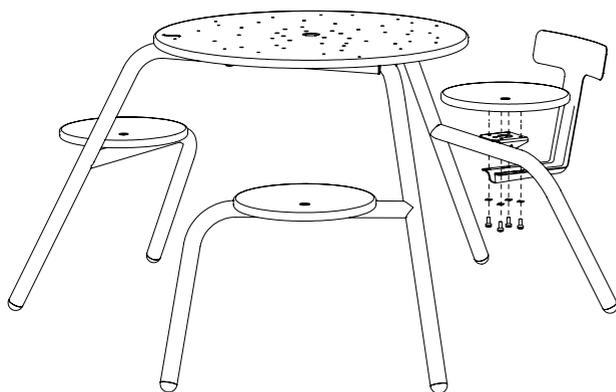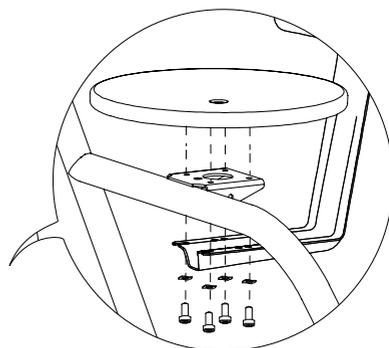


VRS609

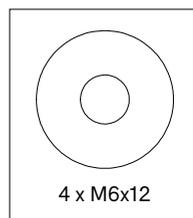


4 x M6x12




2.

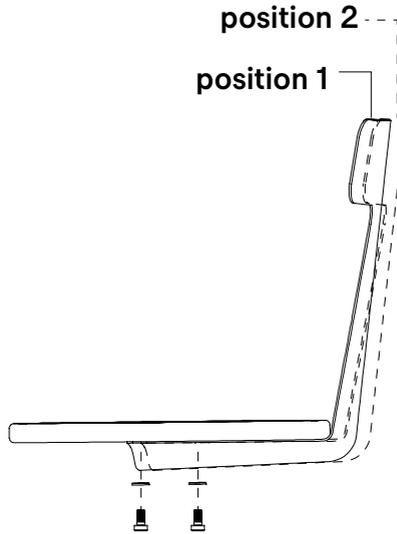

position 1

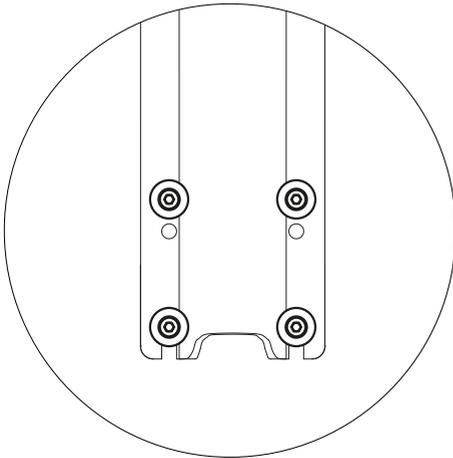


position 2

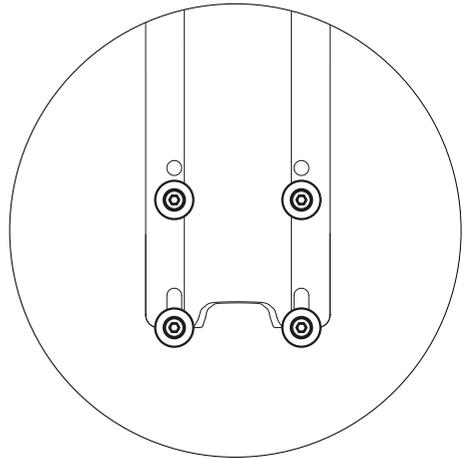

Floor fastening

1.

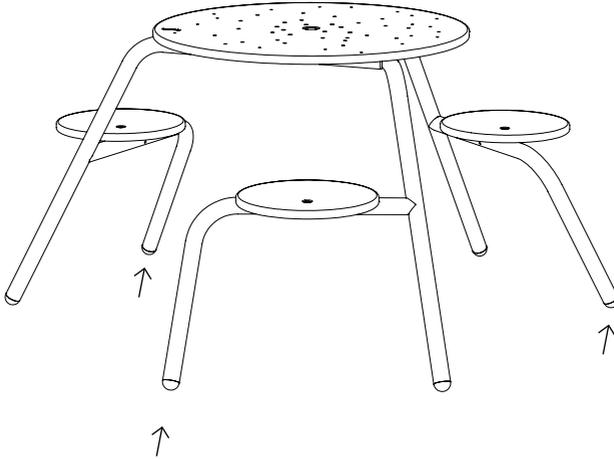


N° 34




10'



2.

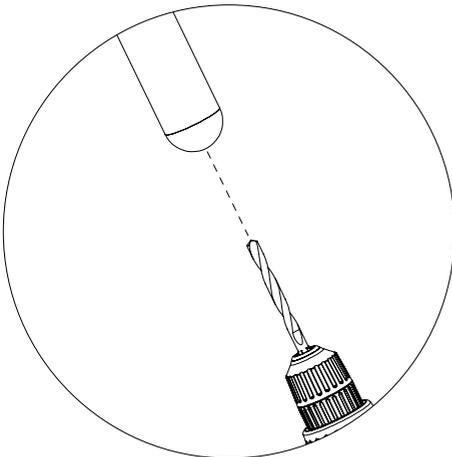


Drill a hole in the plastic cap

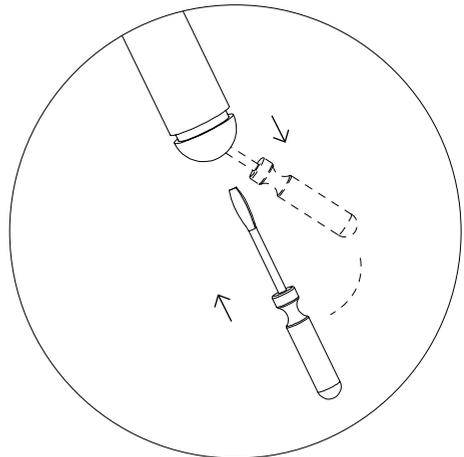

Pull the plastic cap out using a screwdriver




3.

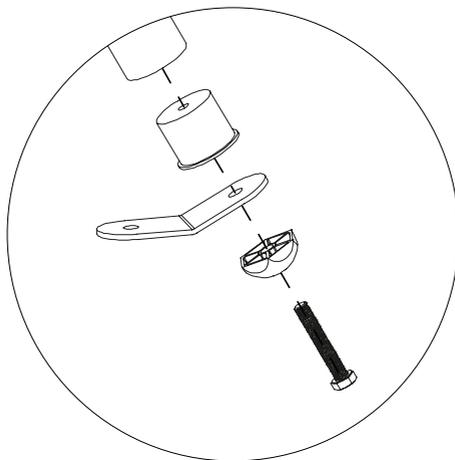


Do not tighten yet!


4.

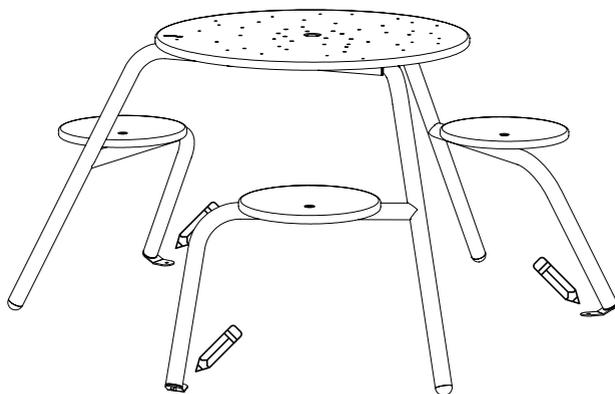

5.

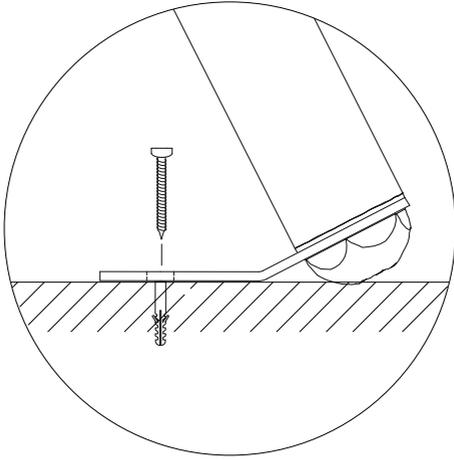


6.

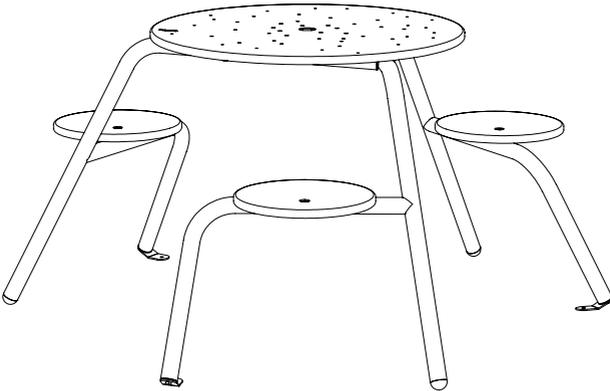

Tighten all bolts

Stacking spacer

1.

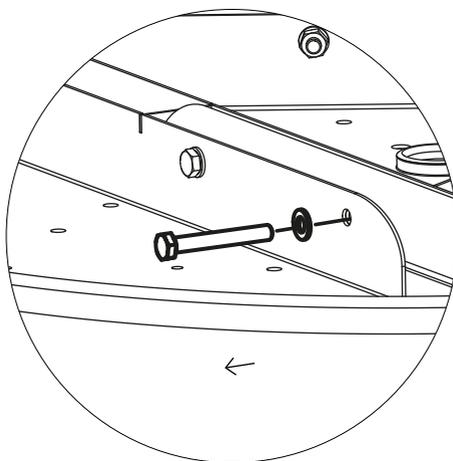

N° 13 (2x)




5'



**In case the legs are already mounted, first
remove the outer bolts and washers**

2.

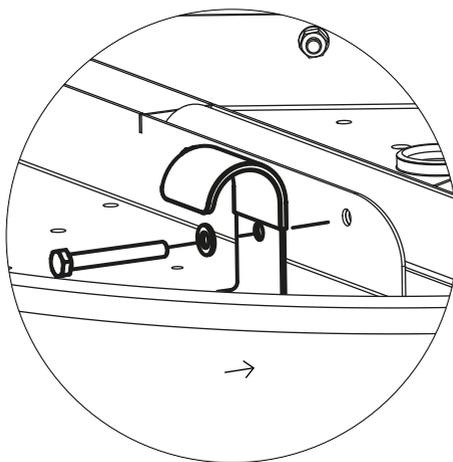

Warnings

Text instructions

Maintenance

Warnings ↗

Assembly text instructions ↗

Maintenance ↗



Warnings

General

- Do not use any sharp tools to open the packaging.
- We strongly advise against using power tools.
- Tripping hazard, mind your step.
- Do not put out cigarettes on the bench.
- Not graffiti proof.
- Do not leave children unattended whilst playing on the bench.
- To avoid danger of suffocation, keep plastic bags away from babies and children.
- Colors can differ over years and from batch to batch.

Product

- Do not stand or jump on the table.
- Do not drag the table, but carry it with minimum 2 people.
- Do not disassemble the seats unless they need to be replaced.
- Anchoring the product has to be done by qualified people.
- For anchoring: use suitable bolts or screws from a specialized store depending on the material your terrace is made of.
- Stackable up to 3 pieces and protect with blankets.
- Always stack the tables with 2 people.
- Do not sit on the tabletop.
- Max. 1 person or 120 kg per seat.

Powder coating

- White powder coating requires more maintenance.
- Do not use abrasive scouring powders or scourers as they will scratch the surface.
- Color can fade to some extent when exposed to UV.
- Flame retarding - NEN-EN13501-1 A2-s1 - Satisfying the same criteria as Class B for the SBI-test according to EN13823. In addition,



under conditions of a fully developed fire these products will not significantly contribute to the fire load and fire growth.

- Dark colors can get very hot in sunny weather.

Sunbrella

- Not waterproof, store inside!
- Shake or brush off loose dirt immediately.
- UV color fastness: 7/8 (ISO 105-B02).



Assembly text instructions



Take a look at the drawings, starting from page 9

Virus (p9 - p12 - p15)

1. Lay the tabletop upside down on the ground, using the packaging to protect it.
2. Slide the legs into the frame as shown in the diagram.
3. Go to page 23 if you want to assemble the stacking spacer. Attach the legs to the frame by inserting 2 M8x60 bolts with 2 M8 spring washers through the frame and legs on each side, from the outside until they emerge on the inside. Fasten them with an M8 spring washer and M8 nut on each bolt. Repeat for the other legs.
4. Go to page 18 if you want to assemble the backrest. Now attach the seats to the legs using 4 M6 bolts and 4 M6 corrugated spring washers as shown on the diagram.
5. Tighten the bolts diagonally as shown on the diagram, do not over-tighten! Max. torque: 8 Nm of 4 kg / 8,8 lb.

Backrest (p18)

1. Turn the table the right way up and attach the backrest and the seats to the legs, 4 M6x12 bolts and 4 M6 corrugated spring washers as shown on the diagram. Attention: tighten the bolts securely but do not over-tighten! Max. torque: 8 Nm of 4 kg / 8,8 lb.
2. Position 2 allows more body depth.




Floor fastening (p20)

1. Turn the table upside down.
2. Drill a hole in the plastic cap & now pull the plastic cap out using a screwdriver as shown on the drawing.
3. Assemble the floor fastening set as shown in the drawing. Do not completely tighten the bolt yet.
4. Mark the places on the ground where the anchoring is to be located and drill at the indicated points.
5. Use the most appropriate fasteners for the surface on which the Virus is to stand.
6. Tighten all the bolts by tightening the plastic cap.

Stacking spacer (p23)

1. In case the legs are already mounted, first remove the outer bolts and washers as shown in the diagram.
2. Position a stacking spacer on each leg as shown in the drawing.



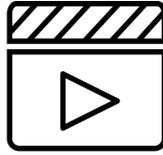

Watch the maintenance videos on our website:

www.extremis.com/maintenance

Powder coating

CLEANING

Regularly

Use Extremis Multicleaner, a 100% biodegradable detergent or common kitchen cleaning products. Avoid using aggressive products. These surfaces are best cleaned with a neutral cleaning product diluted in water.

REPAIRING DAMAGED POWDER COATING

When damaged

The impact of sharp objects can damage the coating. Scratches or dents can be touched up with our paint pens. However this only camouflages the scratches without removing them.

Sunbrella

SPILLED LIQUIDS

Immediately after use

It is best to treat spilt liquids immediately by placing a sheet of absorbent kitchen paper on them. The water-resistant coating on the Sunbrella prevents droplets from penetrating the fabric.



REGULAR CLEANING

When dirty

Make a solution to remove stains on your Sunbrella.

MACHINE WASHING

Rarely

It is also possible to put the blankets and cushion covers in a washing machine (30°). Do not dry clean or tumble dry. The fabric can be creased. Ironing will help to recover the waterrepellent coating of the fabric, but only at a cool setting (delicates). As some irons exceed the recommended temperature at the synthetic setting, test a small, inconspicuous area before ironing the entire fabric. DO NOT use a steamer or iron set to the steam setting.

REMOVING STUBBORN STAINS

Only if nothing else helps

More drastic measures needed? Bleach can be used if nothing else helps. Protect the area around your Sunbrella fabric when using a bleach solution - bleach may discolour non-Sunbrella fabrics. Please be aware of the environment when cleaning with bleach. Bleach can have harmful effects on the natural environment around you. We do not advise using bleach if you are surrounded by a body of water or another environment that could be affected. If stains and/or mildew marks are severe, the quantity of bleach may be increased.





extremis.com

Connect with us



All rights reserved. Unless otherwise specified, all designs and photographs contained in this publication are copyright protected and are the property of Extremis. No part of this publication may be copied or distributed without Extremis' prior written consent. The names of the authors of photographs to which we do not hold rights are mentioned here. We have done our utmost to provide a comprehensive list of names. In the event of an alleged breach, please contact the editorial staff. © Extremis

LAB047